

This operation guide describes the basic functions of your GT Series Tenant Station

For a complete operation manual (3.7 MB), scan QR code or use link to download it from the manufacturer's website: www.aiphone.com/gt-2h_op-man



Power Source

This tenant sub station is powered by the main tenant station (GT-2C) and will always remain on, even when the screen is off. Contact the building manager if the tenant sub station in this residence is not working.

LCD Screen

Microphone

Operation Buttons

MONITOR Push the MONITOR button to see and hear activity in the hallway (personal tenant door station required) or at the main entrance (if enabled).

CALL Push the CALL button to talk between rooms or to call all stations within the apartment (two or more tenant stations required).

GUARD Button

GUARD Push the GUARD button to call all guard and concierge stations connected to the system (if included). To view a visitor on a CCTV camera (if enabled), push the GUARD button while in communication with the entrance station.

Door Release Button

Key Push the door release button to unlock the entrance during a call.

OPTION Button

OPTION Push the OPTION button to activate an external device (if included).

Speaker

LCD Screen Brightness Control

Use the dial to adjust the LCD screen brightness levels (0~10).

Volume Control

Use the dial to adjust the communication volume (0~10).

Chime Volume Control

Use the dial to adjust the chime volume (0~10). The TONE OFF light blinks slowly when the chime is muted.

ADJUST Button

ADJUST Push the ADJUST button to compensate for low or bright backlight conditions when viewing video from a door station.

ZOOM/WIDE Button

ZOOM/WIDE Push the ZOOM/WIDE button to change the screen view or to make a menu selection.

Camera/Cursor Control Button

Push Δ , ∇ , \triangleleft , or \triangleright to change the camera view (zoom-view only). When making menu selections, push Δ or ∇ to change the cursor position.

OFF Button

OFF Push the OFF button to end a call (this does not turn off the station).

TALK Button

TALK Push the TALK button to answer an incoming call.

Once answered, conversation becomes hands-free. For push-to-talk (PTT) mode, push the TALK button until a beep is heard. The conversation then requires the TALK button to be pushed and held while talking and released while listening. Whether the conversation is hands-free or PTT, the talk indicator light turns on while you speak and will turn off while your visitor speaks.

